



GPS Pricing Program


Asset Beacon	Components	Price
<p>Beacon Only</p> 	<ul style="list-style-type: none"> • Locatable unit • GSM antenna (internal) • GPS antenna (internal) • 2 backup batteries (1 internal + 1 spare) • SIM card • 12V power adapter • 110V power adapter 	<p>\$345.00</p>
<p>Beacon and Polycarbonate Enclosure</p> 	<ul style="list-style-type: none"> • Locatable unit • GSM antenna (internal) • GPS antenna (internal) • 2 backup batteries (1 internal + 1 spare) • SIM card • 12V power adapter • 110V power adapter • Weather Polycarbonate Enclosure • O-ring lid seal • Cable gland • Convuluted polyurethane packing 	<p>\$395.00</p>

Monthly Service Plans

Service Type	Price	Additional Usage Charge
<p>Basic (Self Monitored)</p>	<p>\$23.00/mo</p>	<p>Billed in ½MB @ \$6.95 ea **See service plan notes below</p>
<p>*Monitored (24/7 by Certified Operator)</p>	<p>\$30.00/mo</p>	<p>Billed in ½MB @ \$6.95 ea **See service plan notes below</p>

1. *\$35.95 one time activation fee for yearly subscribers*
2. *Typical Installation: \$80.00*
3. *Shipping charges: FedEx Ground Insured*
 - a. *Beacon without enclosure: \$20.00*
 - b. *Beacon with enclosure: \$22.00*
 - c. *Multiple unit discounts are available*

Typical Shipping Schedules

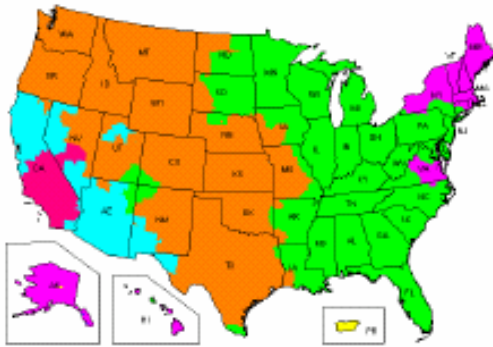

Red =	1 business day
Blue =	2 business days
Orange =	3 business days
Green =	4 business days
Purple =	5 business days
Yellow =	6 business days

*Optional GPS Monitoring Service

***In addition** to the above information that customers can pull from their web portal, for complete security, the following events can be monitored and responded to by a **Certified Operator 24hours a day/7 days a week:**

- Geo-fence Zone Violation Notifications
- Main Power Disconnect
- Emergency Locate

**Service Plan Notes:

- Location/tracking history will be available online for 90 days.
- Monthly package is 100 messages.
- Unused messages expire at month end.
- A *message* is defined as a single outbound or inbound communication with the beacon.
- A single locate of a beacon requires 2 messages.
- Beacon tracking requires 1 'start' message and then a message every 1 minute until a 'stop' message is sent.
- Setting beacon parameters, such as setting a zone, requires 2 messages.
- A trigger of a beacon parameter, such as receiving a zone violation, will generate 3 messages.
- Prices subject to change.